



2/168 SOMME


A vertically running wood pattern. The uneven surface of the sticks is reminiscent of broken and splintered wooden beams. Concrete Pattern by André Berthier & Joseph Frassanito.

DIMENSIONS

| Uses | Dimensions (mm) | Order Number |
|------|-----------------|--------------|
| 100 | ▲ 7900 × ► 1270 | C 2168 |
| 50 | ▲ 6000 × ► 1000 | F 2168 |
| 10 | ▲ 6000 × ► 1000 | T 2168 |

100-timer formliners are supplied in an individual dimension within the maximum indicated dimensions.

The specified widths of the 10-timer and 50-timer formliners are a fixed dimension and ensure the continuity of the structure in the case of linear patterns. The longitudinal direction of the pattern is variable and can be ordered from 1 m up to the maximum dimension in 50 cm steps.

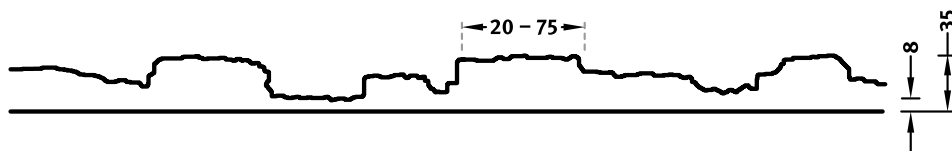

RECKLI HEADQUARTERS

Do you have a question about our products
and would like to get in touch? You can call us
on the following number:

+49 2323 1706-0

RECKLI GmbH
Industriestraße 36
44628 Herne
Germany
Fax: +49 2323 1706-50
Mail: info@reckli.com
www.reckli.com

REFERENCES

