



2/168 SOMME


A vertically running wood pattern. The uneven surface of the sticks is reminiscent of broken and splintered wooden beams. Concrete Pattern by André Berthier & Joseph Frassanito.

DIMENSIONS

Uses	Dimensions (mm)	Order Number
100	▲ 7900 × ► 1270	C 2168
50	▲ 6000 × ► 1000	F 2168
10	▲ 6000 × ► 1000	T 2168

100-timer formliners are supplied in an individual dimension within the maximum indicated dimensions.

The specified widths of the 10-timer and 50-timer formliners are a fixed dimension and ensure the continuity of the structure in the case of linear patterns. The longitudinal direction of the pattern is variable and can be ordered from 1 m up to the maximum dimension in 50 cm steps.

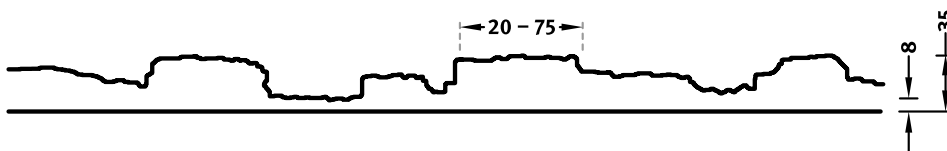

RECKLI HEADQUARTERS

Do you have a question about our products
and would like to get in touch? You can call us
on the following number:

+49 2323 1706-0

RECKLI GmbH

Gewerkenstr. 9a

44628 Herne

Germany

Fax: +49 2323 1706-50

Mail: info@reckli.com

www.reckli.com

REFERENCES

